


Venting the air from the circuit. For your Oasis® to operate correctly, you must expel all the air from inside the circuit. The procedure is very simple.

Set up the system and switch on your Oasis® with your preferred program.

Disconnect the hose connected to the dripper halfway along the loop circuit, put your finger over one end to seal it, and wait for water to flow from the free end. Now put a finger over the end of the hose from which water is flowing, and at the same time remove your finger from the other end of the circuit allowing the water to flow. At this point, reconnect the hose to the dripper and restore the loop circuit.

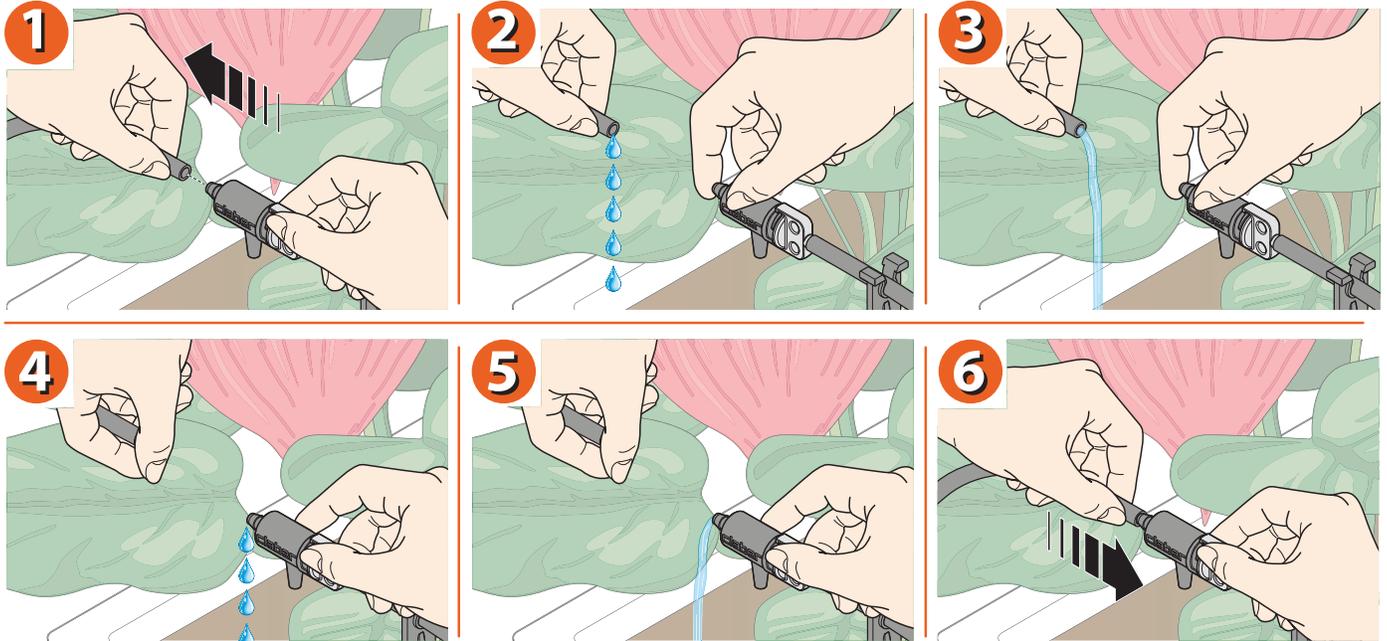

For Oasis (cod.): 8053

Cleaning the filter. The filter must only be removed and refitted when the tank is empty.

Before each use check the state of the filter and eliminate any impurities from the water which may have been caught by the mesh. If necessary, remove the filter and rinse under running water.

Cleaning the drippers. The drippers can be cleaned and inspected to allow them to be cleaned inside if necessary: to do this, separate the two pieces which make up the dripper and rinse them under running water.



For Oasis (cod.): 8053