


US Programming

DELETING PROGRAMS

It is possible to cancel a program previously set.

- 1 Select the **CLOSED** page of the program that you wish to cancel.
- 2 Press **ENTER**; **OK** appears.
- 3 Press both **◀** and **▶** buttons until display reads 00:00 and the number corresponding to the program (1 or 2) located on the upper left side of the display is no longer shown.

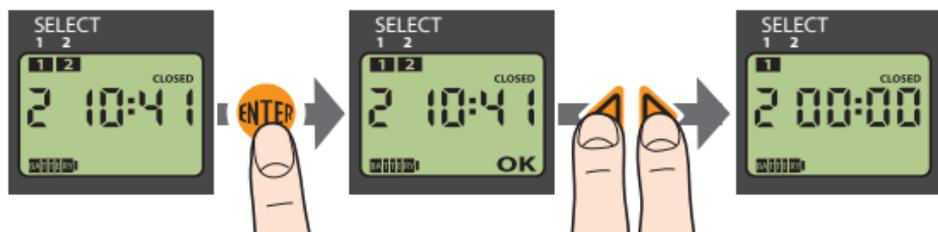

DEFAULT FACTORY SETTINGS

On any page, hold down for approximately 10 seconds the **◀** and **▶** buttons until display shows 00:00.

