


## Ordinary maintenance of Oasis

In case of rusty water we recommend checking the condition of the piston



1) Remove the front panel and disconnect the control cables from the solenoid

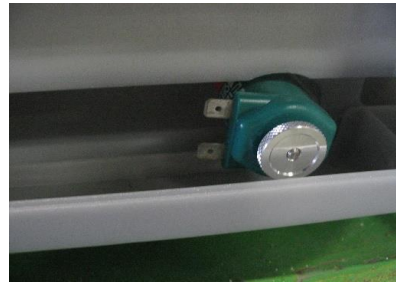

2) Remove the solenoid from the sniffer by simply unscrewing it.



Solenoid

Check there are no signs of rust or grime

Note:

Created By:

Sandra Querin

Articolo : Oasis ( dalla data 012 )




1

3) From the solenoid unscrew the ring nut and pull out the solenoid's core



2

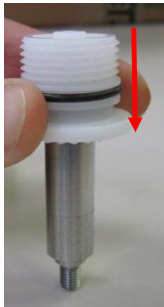

3

4) Place the core on the table and push down (see photo 3), holding the insert that comes out of the core with the other hand (see photo 4))



4



5

5. Check the condition of the piston (there should not be any rust) Clean with a 40/60 solution of vinegar and warm water.



6

Leave everything to dry and day after to assemble the pieces

Note:

Compilato da:

Sandra Querin  
*Sandra Querin*

Articolo : Oasis ( dalla data 012 )

## 6. Then reassemble all the elements together



7

7. Insert the piston inside the core, place it on the insert and hold it with your hand. Push the insert into it (the tip of the insert facing upwards - as in picture 8)



8



9



10

8. Push in the two core pieces all the way (as in picture 10). Insert in the solenoid.



9. Reassemble the solenoid making sure to check that the solenoid is tightly screwed on the sniffer and that the solenoid control cables are correctly installed (red cable positive polarity (+) and black wire negative polarity (-)).

Note:

Compilato da:

Sandra Querin  
*Sandra Querin*